



1/7

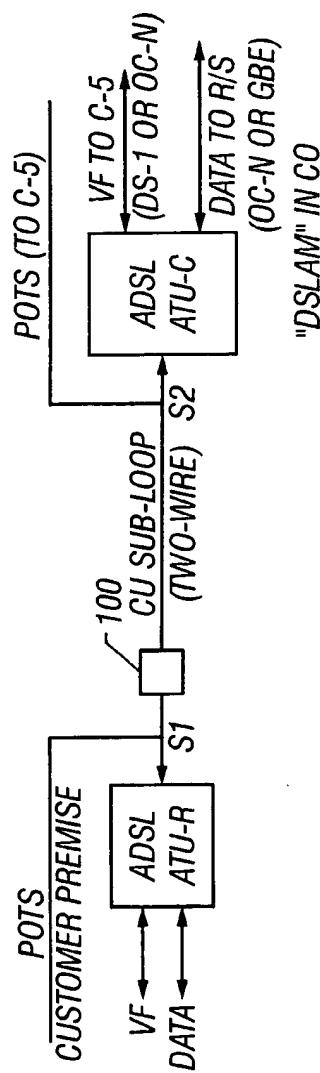


FIG. 1

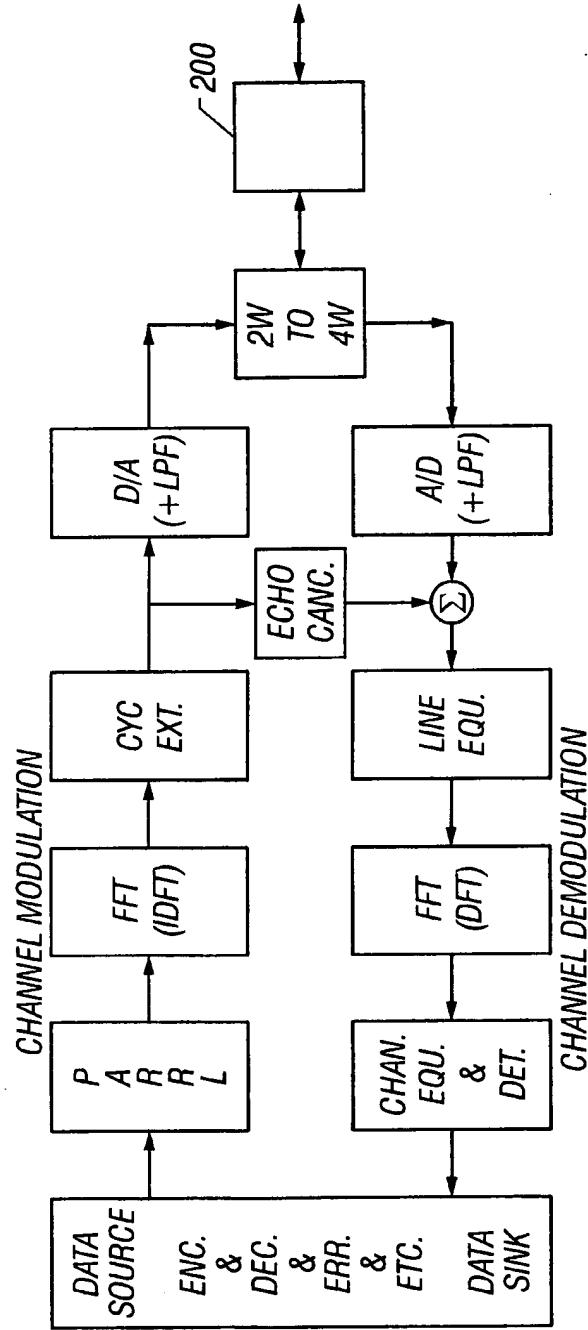


FIG. 2



2/7

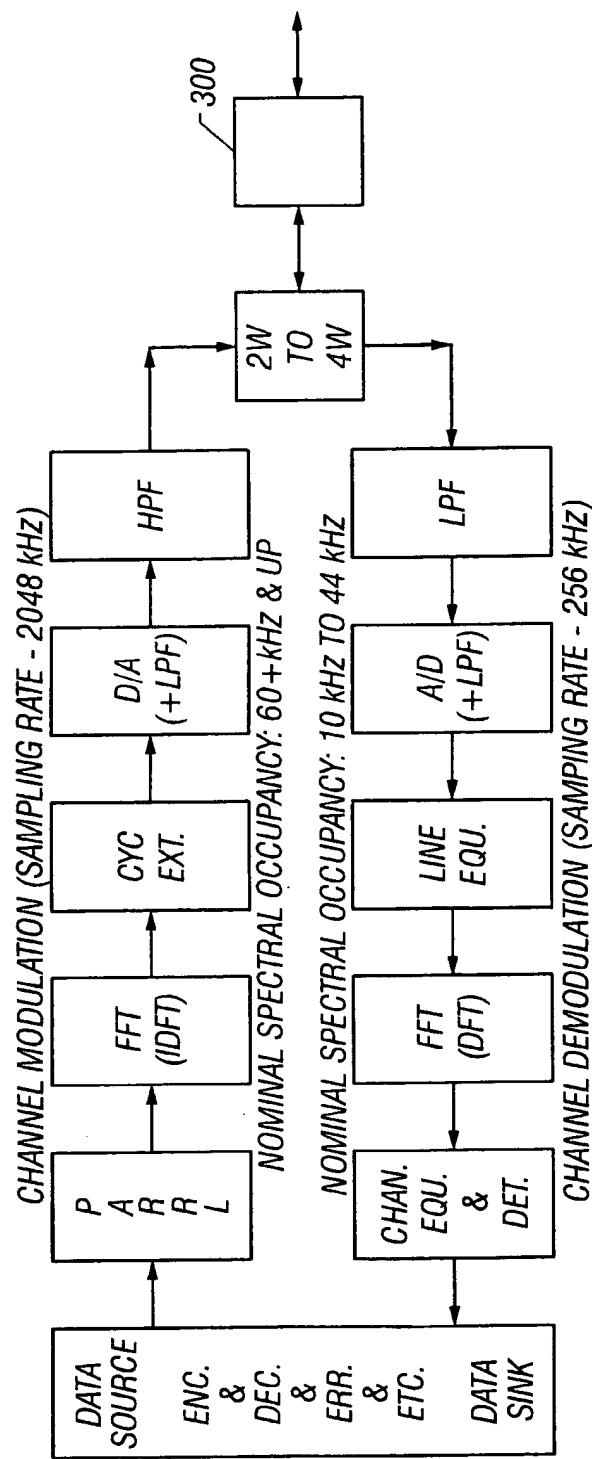


FIG. 3



3/7


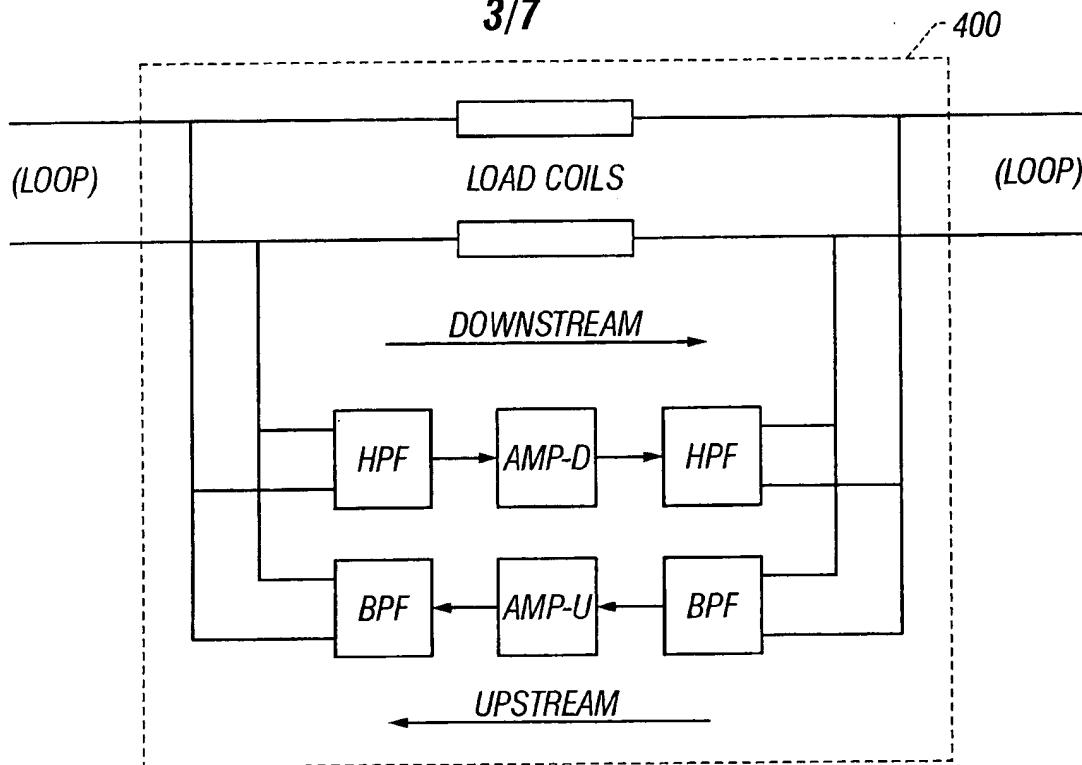


FIG. 4

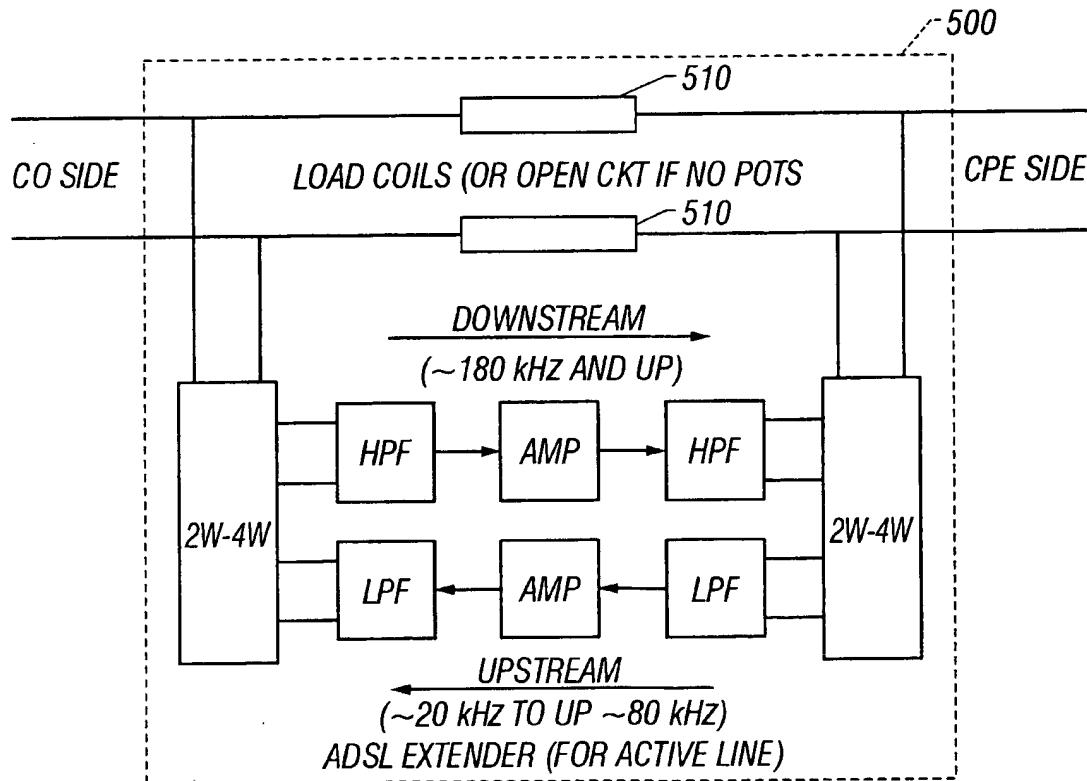

1.0-A : EXTENDER SPACING = 6000 FEET; LOAD COILS = 88 mH
1.0-B : EXTENDER SPACING = X (TBD); NO LOAD COILS

FIG. 5

O P E R A T I O N S
APR 30 2005
TELETYPE AND FAX SERVICE

4/7

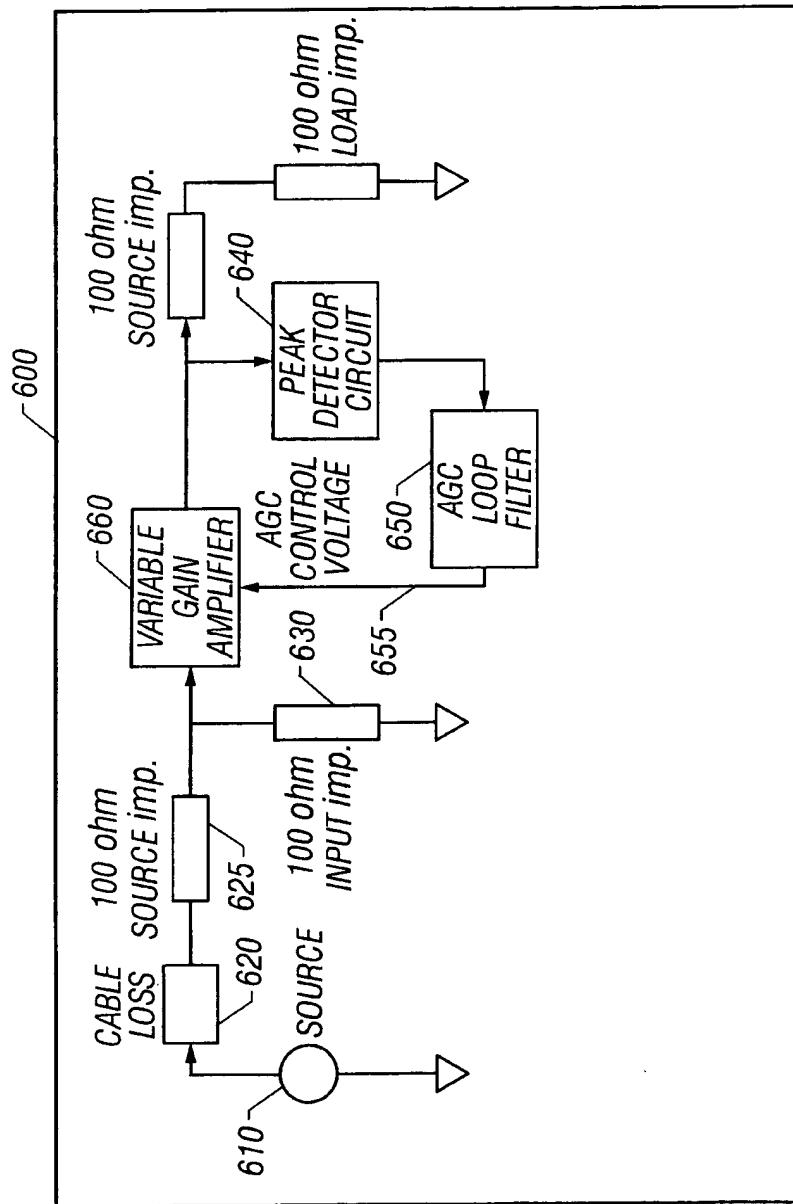


FIG. 6



5/7

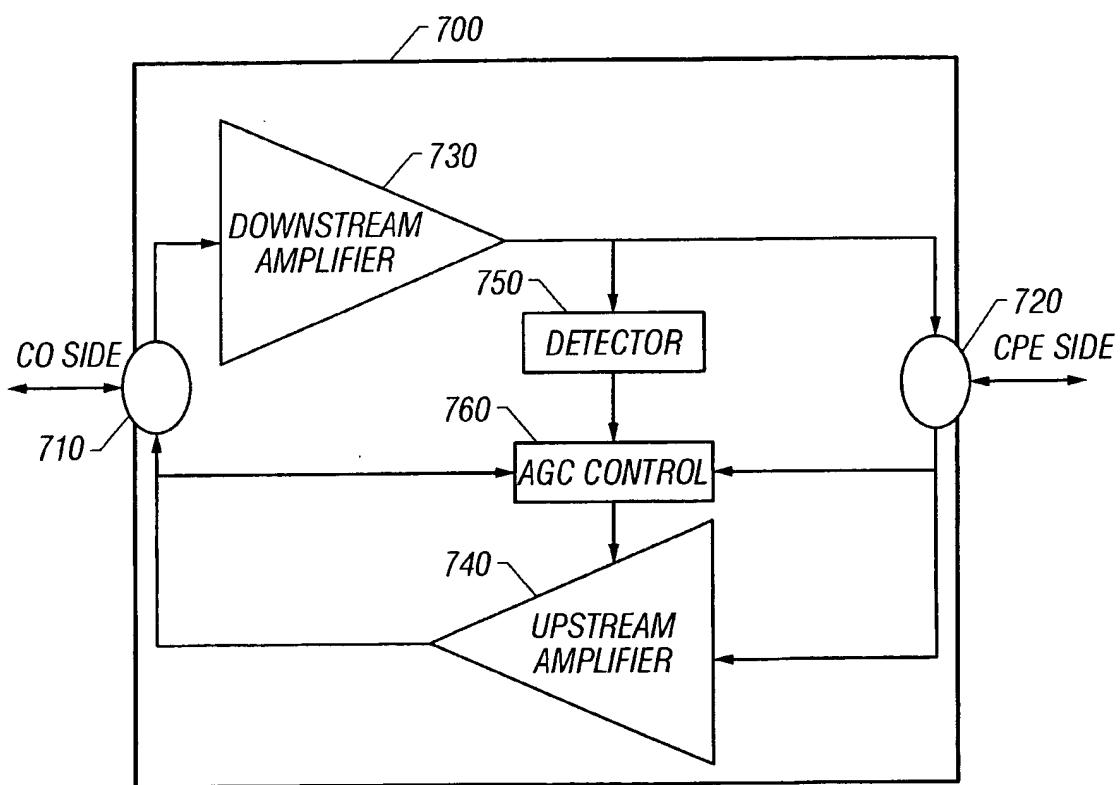


FIG. 7

6/7

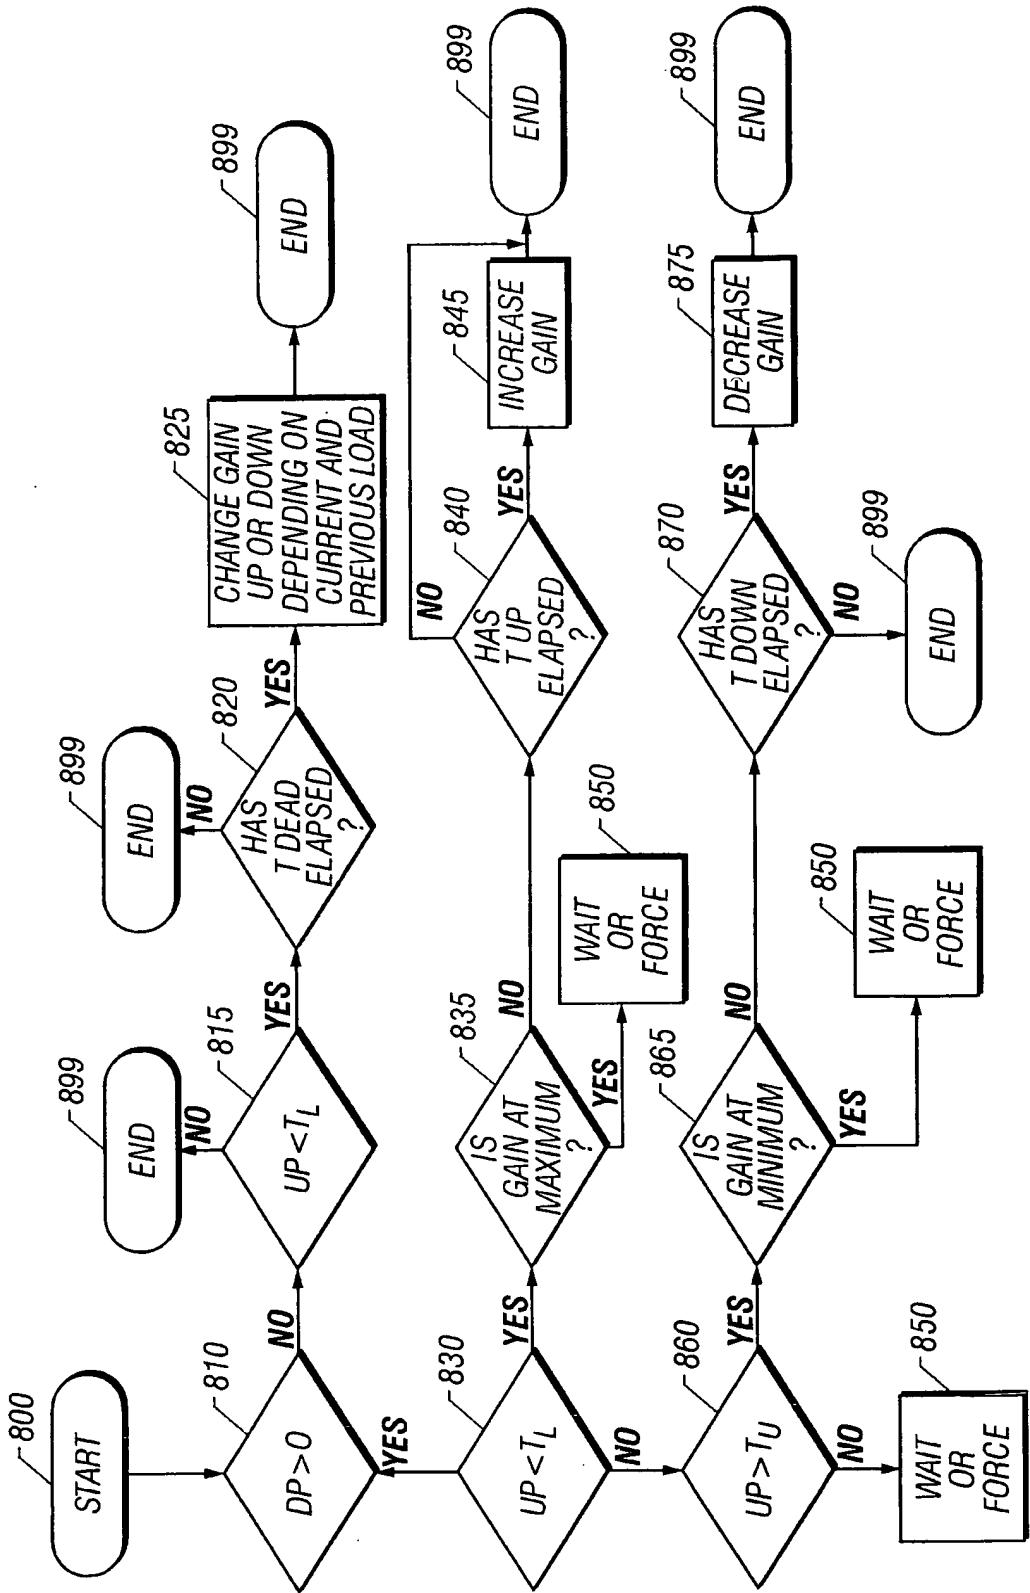


FIG. 8

